 


Please read this instruction before installation.





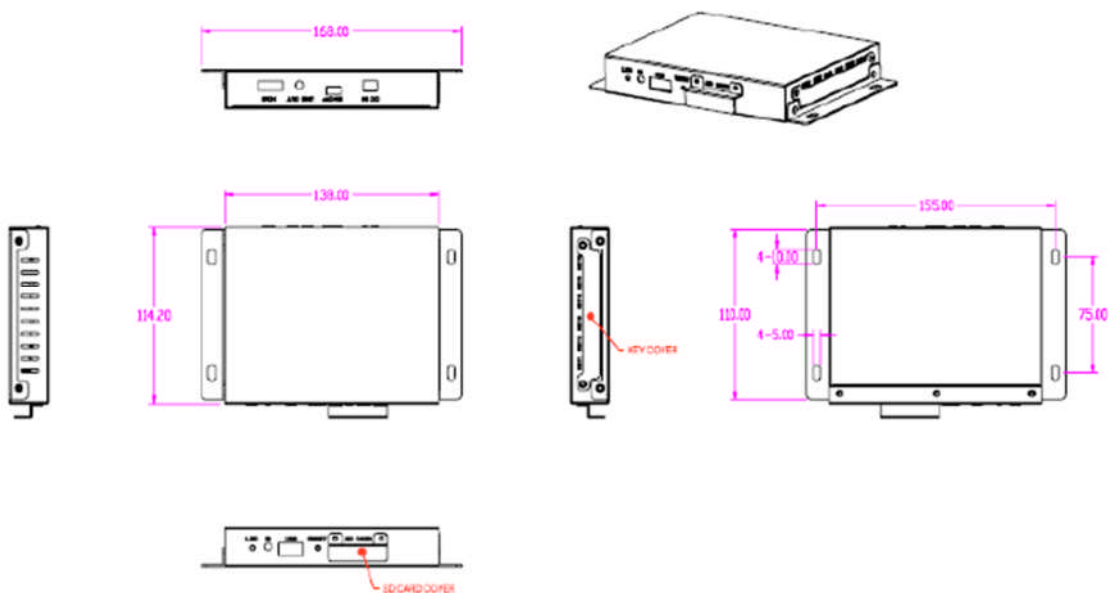

## Spec. & Package



Technical Specification		
Model	MPL028H-B6	
Hardware	Casing	Metal
	Resolution	1920x1080p
	Color	Black
	Audio System	Stereo
	Supported File Format	JPEG, MPEG1,2,4 music, H.264
	Supported Storage Medium	SD Card,
	Play Back Features	Auto start, Auto play, Auto repeat
	Motion Sensor	Optional
	Input	3.5mm stereo jack
	Audio input	3.5mm stereo jack
	Control Buttons	N/A
	Speaker	N/A
	Input voltage	DC5V 1,0A
	Max Power Consumption	N/A
	Accessories	Power adaptor, Remote Control
Optional Function (Additional Cost)	Button	Up to 6 buttons
	Lift	N
	Battery	N

# Introduction

## Remote Control

•  — on/off button	
• MUTE — mute	
• MENU — return to main menu	
• STORAGE — switch between different storage medium (USB/SD)	
• VOL+ — volume up	
• VOL- — volume down	
• MODE — switch between 4:3 or 16:9 viewing mode	
• EDIT — copy or paste specific files	
• INDEX — show content file lists	
• SETUP — enter setup menu	
•  — directional keys	
• ENTER — confirm key	
•  — previous/next track	
•  — stop	
•  — play/pause	
• DISPLAY — show file info	

# Main Menu Selections

The home screen is divided into 6 main selections



Display all movie contents



Display all Photos content.



Display all music contents



Display all text contents



Display all contents



Configure settings and perform software upgrade

# Base Control

## General Setup

### 1. Display

- Display
- Language
- Clock
- Timer
- Photo setup
- Movie setup
- Music setup
- Text setup
- Default
- About
- Upgrade
- Button Mode

**Setting-Display**

Display ◀ 480p ▶

TVMode ◀ 16:9 ▶

Display	1080P, NTSC, PAL, 480I, 576I, 480P, 576P, 720P, 1080I
TVMode	16:0, 4:3

### 2. Language

- Display
- Language
- Clock
- Timer
- Photo setup
- Movie setup
- Music setup
- Text setup
- Default
- About
- Upgrade
- Button Mode

**Setting-Language**

English

German

Spanish

Italian


Portuguese

Netherlands

Russian

Polish

### 3. Clock

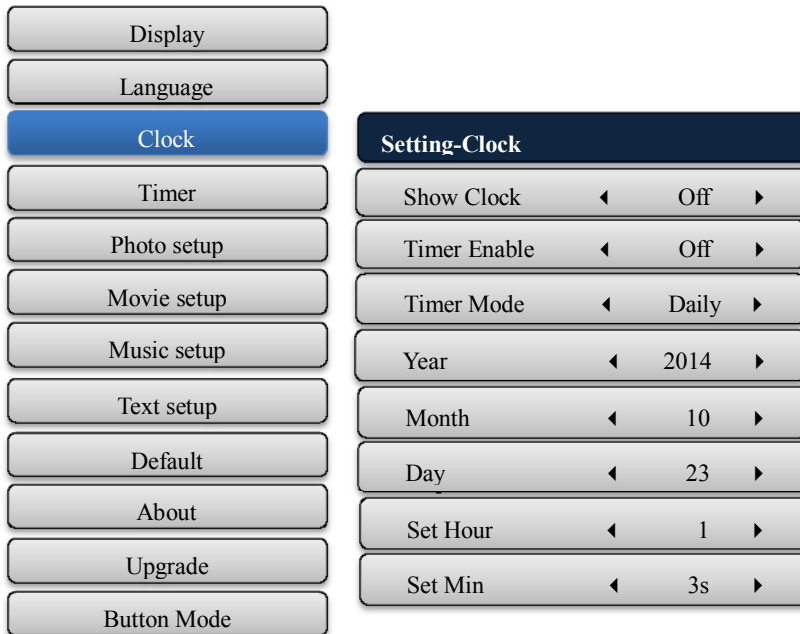

#### Show Clock

ON
OFF

Set turn ON to display the clock and turn OFF to hide the clock

#### Timer Enable

ON
OFF

Turn on after setting the time of the timer.

#### Timer Mode

Daily	Everyday
Weekly	Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday

#### 4. Timer

Display	
Language	
Clock	
<b>Timer</b>	<b>Setting-Timer</b>
Photo setup	Timer1 On -- Hour ◀ 17 ▶
Movie setup	-- Min ◀ 1 ▶
Music setup	Timer1 Off -- Hour ◀ 17 ▶
Text setup	-- Min ◀ 2 ▶
Default	Timer2 On -- Hour ◀ 17 ▶
About	-- Min ◀ 3 ▶
Upgrade	Timer2 Off -- Hour ◀ 17 ▶
Button Mode	-- Min ◀ 4 ▶
	Timer3 On -- Hour ◀ 17 ▶
	-- Min ◀ 5 ▶
	Timer3 Off -- Hour ◀ 17 ▶
	-- Min ◀ 6 ▶

- Daily Mode
- Weekly Mode : Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday


*Remark:* Set the time of the time before turn on the timer Enable.

#### 5. Defaults

FACTORY SET	Press <i>ENTER</i> to go back to factory setting
-------------	--

# Advanced Control

## Photo Setup

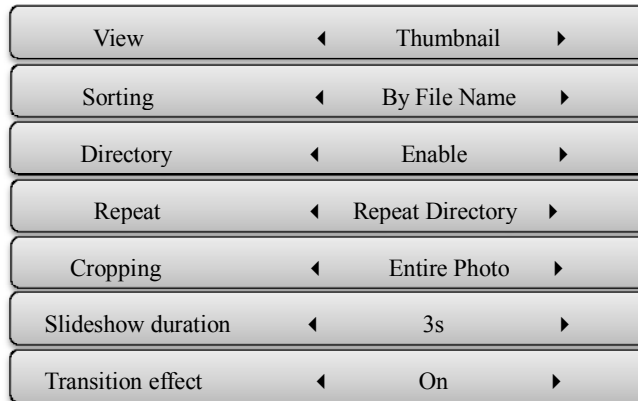

### 1. View

Thumbnail	A small description
List	A number of items or names listed consecutively

### 2. Sorting

By File Date	Files arrange by the Date
By File Name	Files arrange by the Name

### 3. Directory

Users can select enable or disable directory.

### 4. Repeat

Repeat All	Play the photos from the beginning once or a number of times
Repeat Directory	Directory repeat
Repeat Off	Stop playing the photos once it finished

### 5. Cropping

Entire Photo	Cut out the whole photo
Smart Crop	Smart Crop
Stretch Photo	Cut out the photo to a longer or wider one

### 6. Slideshow Duration

The time interval between slides can be set as 3 seconds, 5 seconds, 10, seconds 30 seconds, 60 seconds and 5 minutes.

## 7. Transition Effect

On	Lighting, sound or scenery effect may occur between slides
Off	No effect will occur between slides

## Movie Setup

View	◀	List	▶
Sorting	◀	By File Name	▶
Directory	◀	Enable	▶
Repeat	◀	Repeat Directory	▶
Subtitle	◀	Off	▶
Resume Play	◀	Off	▶
Digital Audio Ouput	◀	Spdif PCM	▶

### 1. View

List	A small description
Thumbnail	A number of items or names listed consecutively

### 2. Sorting

By File Date	Files arrange by the Date
By File Name	Files arrange by the Name

### 3. Directory

Users can select enable or disable directory.

### 4. Repeat

Repeat All	Play the movie from the beginning once or a number of times
Repeat Directory	Directory repeat
Repeat Movie	Continue playing the current movie again once it finished
Repeat Off	Stop playing the movie once it finished



## 5. Subtitle

On	Movie captions will be displayed that translate or transcribe the dialogue
Off	No captions will be displayed

 
## 6. Resume Play

Off	Not to continue playing the movie again after a pause
On	Continue to play the movie again after a pause or interruption.

## 7. Digital audio Output

Spdif PCM	Covert the current audio format to PCM format and then output
Spdif RAW	Audio format on the disc without treatment, the authentic output from the coaxial and fiber

# Music Setup

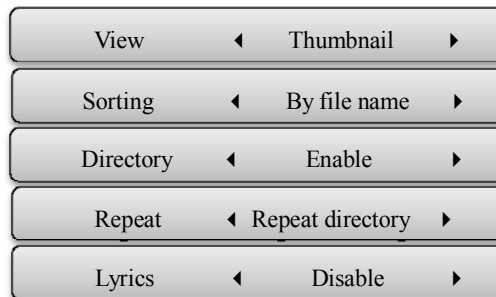

## 1. View

List	A small description
Thumbnail	A number of items or names listed consecutively

## 2. Sorting

By File Date	Files arrange by the Date
By File Name	Files arrange by the Name

## 3. Directory

Users can select enable or disable directory.

## 4. Repeat

Repeat All	Play the music from the beginning once or a number of times
Repeat Directory	Directory repeat
Repeat Song	Continue playing the current music again once it finished
Repeat Off	Stop playing the music once it finished

## 5. Lyrics

Enable	Display the words of a song
Disable	Not to display the words of a song

## Text Setup



### 1. Sorting

By File Date	Files arrange by the Date
By File Name	Files arrange by the Name

### 2. Directory

Users can select enable or disable directory.

### 3. Front Color

There are 4 front colors for users to choose – Black, white, blue and green.

### 4. Background Color

There are 3 background colors for users to choose – Effect 1, Effect 2 and Effect 3.

### 5. Auto Browser Speed

3 auto browser speed can be chosen according to your need – Normal, slow and fast.

### 6. Resume Play

3 types of resume play speed can be chosen – Normal, slow and fast.

# Button Mode

1. Press *SETUP* in the Remote Control, choosing Button Mode to select the suitable mode for you.



2. In Button Mode, you can select either *Audio Display* or *Number Mode* according to your need.



Key 1: Previous Video

Key 2: Next Video

Key 3: Play/ Pause

Key 4: Stop

Key 5: Volume +

Key 6: Volume -

- b. In Number Mode, You have 2 blinking modes to choose – Retail or Museum.



Selected Retail as the blink mode, the buttons will keep blinking every 3 seconds.



Selected Museum as the blink mode, it will only blink when you press the button.

- You can press the button for watching different video.  
For example: Button 1 for watching Video 1.
- If you do not press any button, it will start looping at Video 0.